


PREPARE

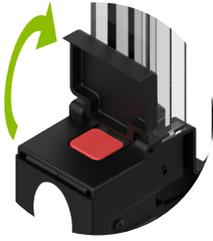

① Open flap

② Press the red button and pull out cartridge



LOAD



① Place the refill pack in the corresponding cartridge

② Pull tape tab up and off




③ Slowly and carefully pull up bag and remove from cartridge

PRIME



① Push trigger to release first cutlery.

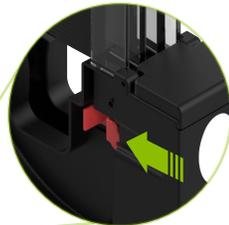

USE

① Push cartridge back



② Use



* This trigger also clears jams.
No need to push trigger if cutlery is already dispensed